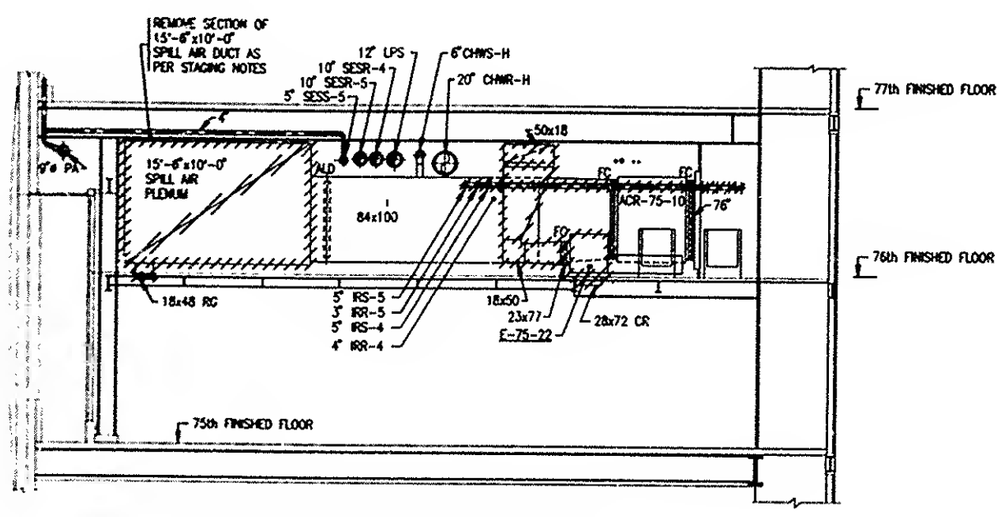

SECTION – REMOVAL N / M-20

SCALE IN FEET 0 8 16

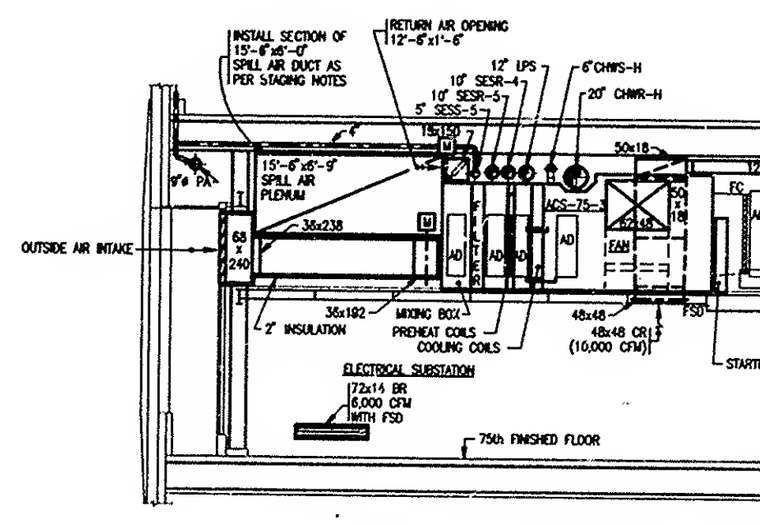

SECTION – INSTALLATION N / M-2

SCALE IN FEET 0 8 16

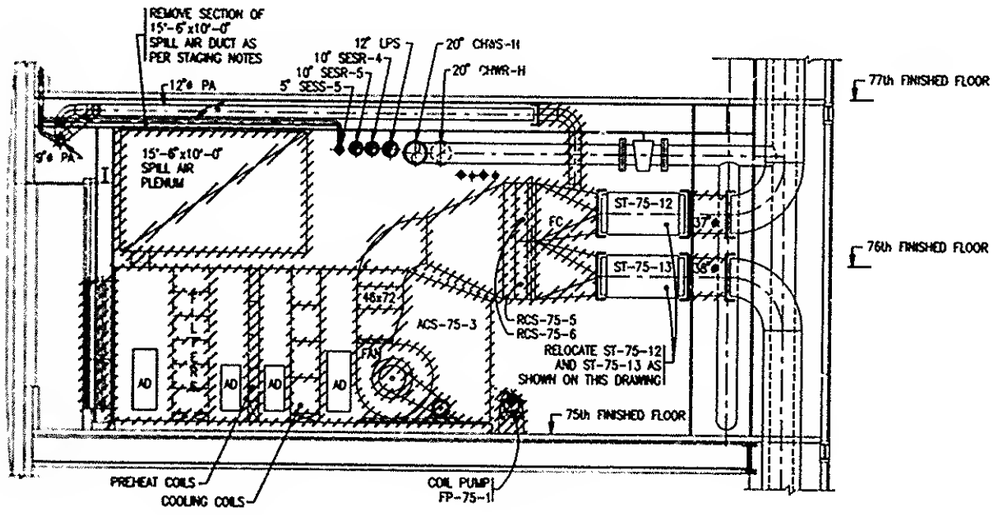

SECTION – REMOVAL 0 / M-20

SCALE IN FEET 0 8 16

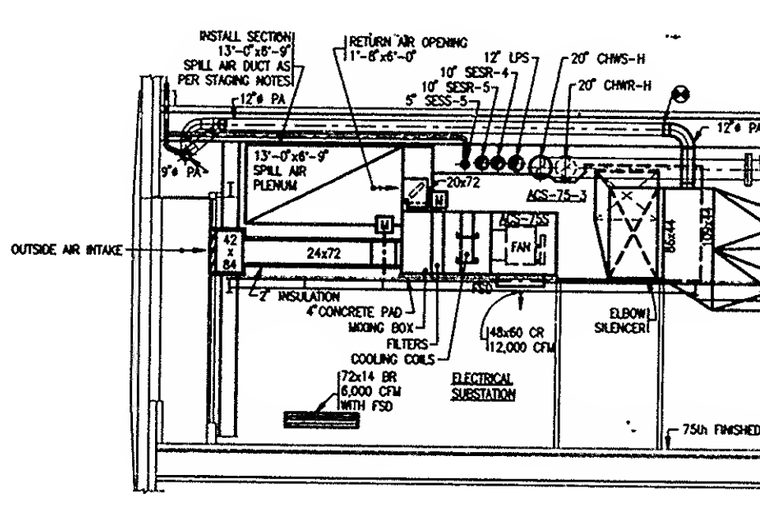

SECTION – INSTALLATION 0 / M-21

SCALE IN FEET 0 8 16

FILE NAME 755_M20 SCALE FACTOR 1=8